



Start with frame

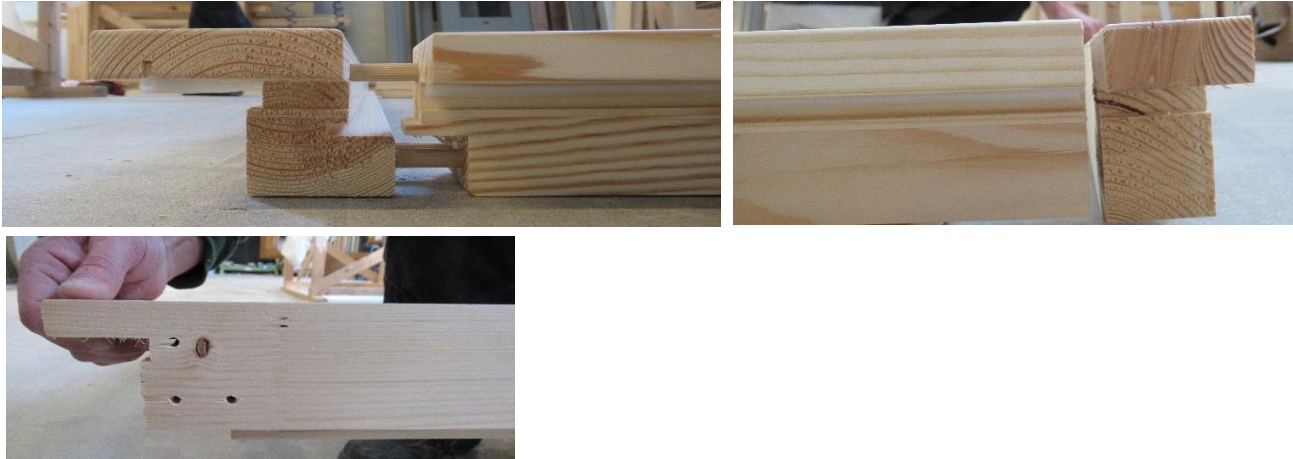


Screw Aluminum threshold

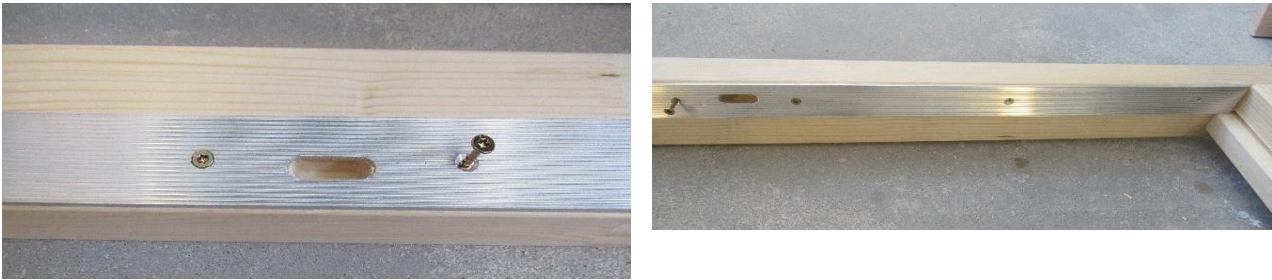

Add rubber



Screw hinges in pre drilled holes

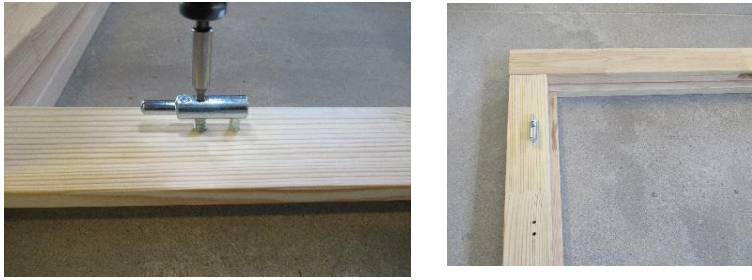

Install frame in wall and after that finish on inside with the 3 slats

